


## SWAGELESS INSTALLATION INSTRUCTION



- 1 Unscrew the cone (bottom housing) and take out the jaw and the copper washer.  
Note: The 3 pieces jaw has a wire ring to keep them together.

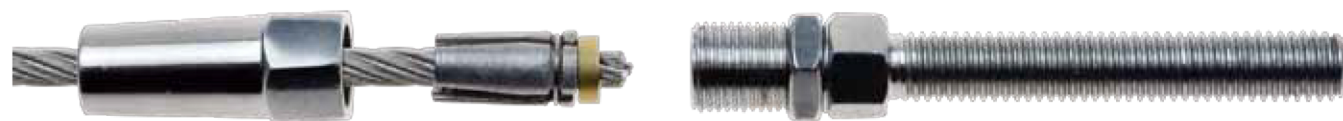

- 2 Insert the cable from the bottom of the housing and place the jaw with the tapered end toward the housing (make sure the 3 pieces jaw spread around the cable evenly), place the copper washer after the jaw, the cable should protrude about 1/8" beyond the copper washer.



- 3 Carefully push the jaw, the washer and the cable all together toward the bottom of the housing. Make sure the cable is still 1/8" out from the washer when the jaw has reach at the bottom of the housing.



- 4 Screw the head of the fitting to the housing until it stops.

## SWAGELESS INSTALLATION INSTRUCTION



- 5 Use 2 proper size wrenches, one on the housing and the other one on the head of the fitting and starts to tighten in opposite direction as far as possible.



- 6 Screw and tighten the lock nut toward the housing.

We strongly recommend customers to use Non-Acidic silicon to seal the tip of the housing around the wire to avoid moisture get to inside of the part.